MIDMARK®

DRESSING NOOK/INSTRUMENT PANEL INSTALLATION INSTRUCTIONS

CONCEALED DAMAGE. If there should be damage of such nature that it could not be detected until goods were unpacked have the Transportation Company's Agent call AT ONCE and inspect them. Require him to give you a "concealed" bad order report stating the condition of the goods when examined. It is his duty to do this and you should INSIST upon it.

IF THE ABOVE INSTRUCTIONS ARE COMPLIED WITH we shall cheerfully render all possible assistance in establishing claims against the Transportation Companies for loss and damage in transit.

WE DO NOT ACCEPT GOODS RETURNED FOR CREDIT, EXCHANGE, REPAIRS, or for any other reason, unless you have first communicated with us and secured our written permission.

INSTALLATION PROCEDURES:
The Dressing Nook and Instrument Panel are mounted to the wall using steel brackets (provided with units). Wall anchors and drywall screws are also provided to secure the brackets to the wall. The following procedures should be used to ensure proper installation. Figures A thru E are suggested mounting configurations and locations only.

1.) Determine where the Dressing Nook and/or Instrument Panel are to be located from the customer or room layout drawing. (See Fig. C)

2.) Check clearance required for placing a side chair beside the Dressing Nook. A minimum of 24" is required for the 129/429 Side Chair. (See Fig. A)

3.) Measure and mark mounting locations of the bracket(s) on the wall. (Refer to Fig. A and B: if locations of unit(s) differ from what is shown in Fig. A, then bracket locations shown in Fig. B must be changed accordingly).

4. Locate and mark location of studs in reference to mounting bracket. (Use an electronic stud finder if available)

5. Place mounting bracket in position on wall and mark the locations of all fasteners. Remove the bracket and drill a 3/8" hole where all wall anchors are to be used. (Four wall anchors per bracket if a stud is not located or three holes if a stud is to be used.)

6. Install wall anchor into 318" hole and tighten screw enough to hold wall anchor in place. Remove screw from each wall anchor.

7. Attach bracket(s) to wall using drywall and wall anchor screws. Level each bracket before securing to wall. THE 61 7/16" MINIMUM DIMENSION BETWEEN THE DRESSING NOOK BRACKETS IS CRITICAL FOR INSTALLATION.

8. Test each bracket for strength and safety.

9. Mount instruments to Instrument Panel using 314" long wood screws. (Refer to Fig. D and E for suggested instrument locations.)

10. Lift Dressing Nook and/or Instrument Panel onto mounting brackets.

NOTE: When mounting to a wall with metal studs use sheet metal screws in place of drywall screws and when mounting to a masonary/concrete block wall use masonary screws in place of drywall screws and wall anchors.

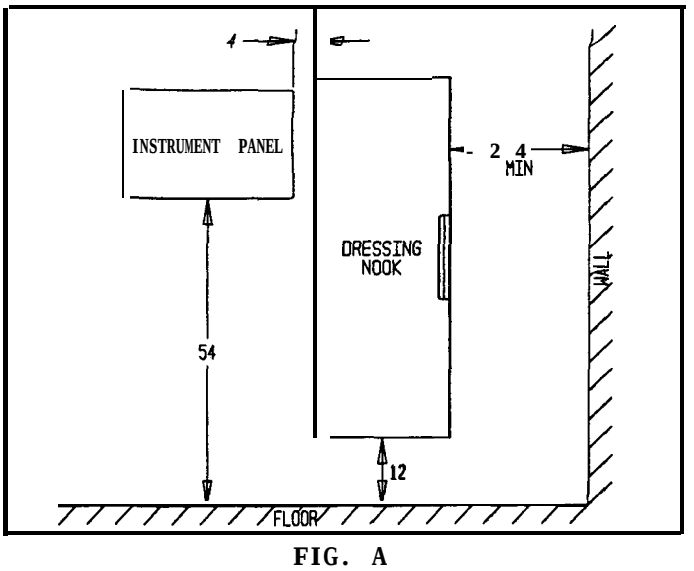

FIG. A

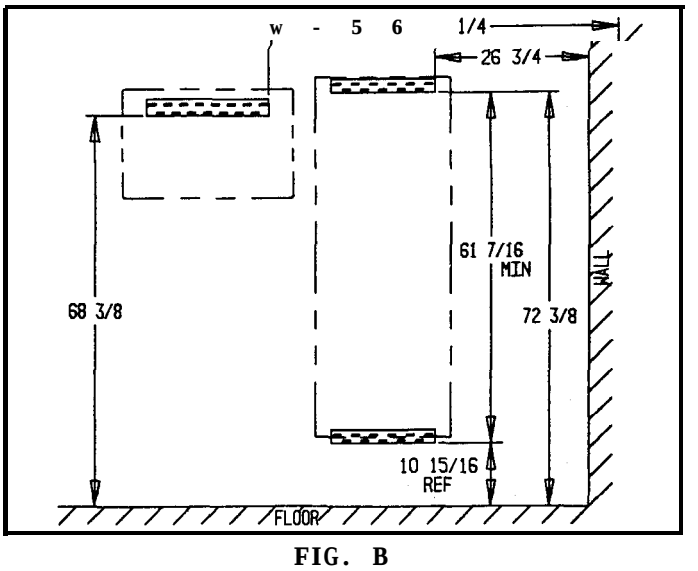

FIG. B

Because we care.

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 USA

003-0597-00 Rev. A

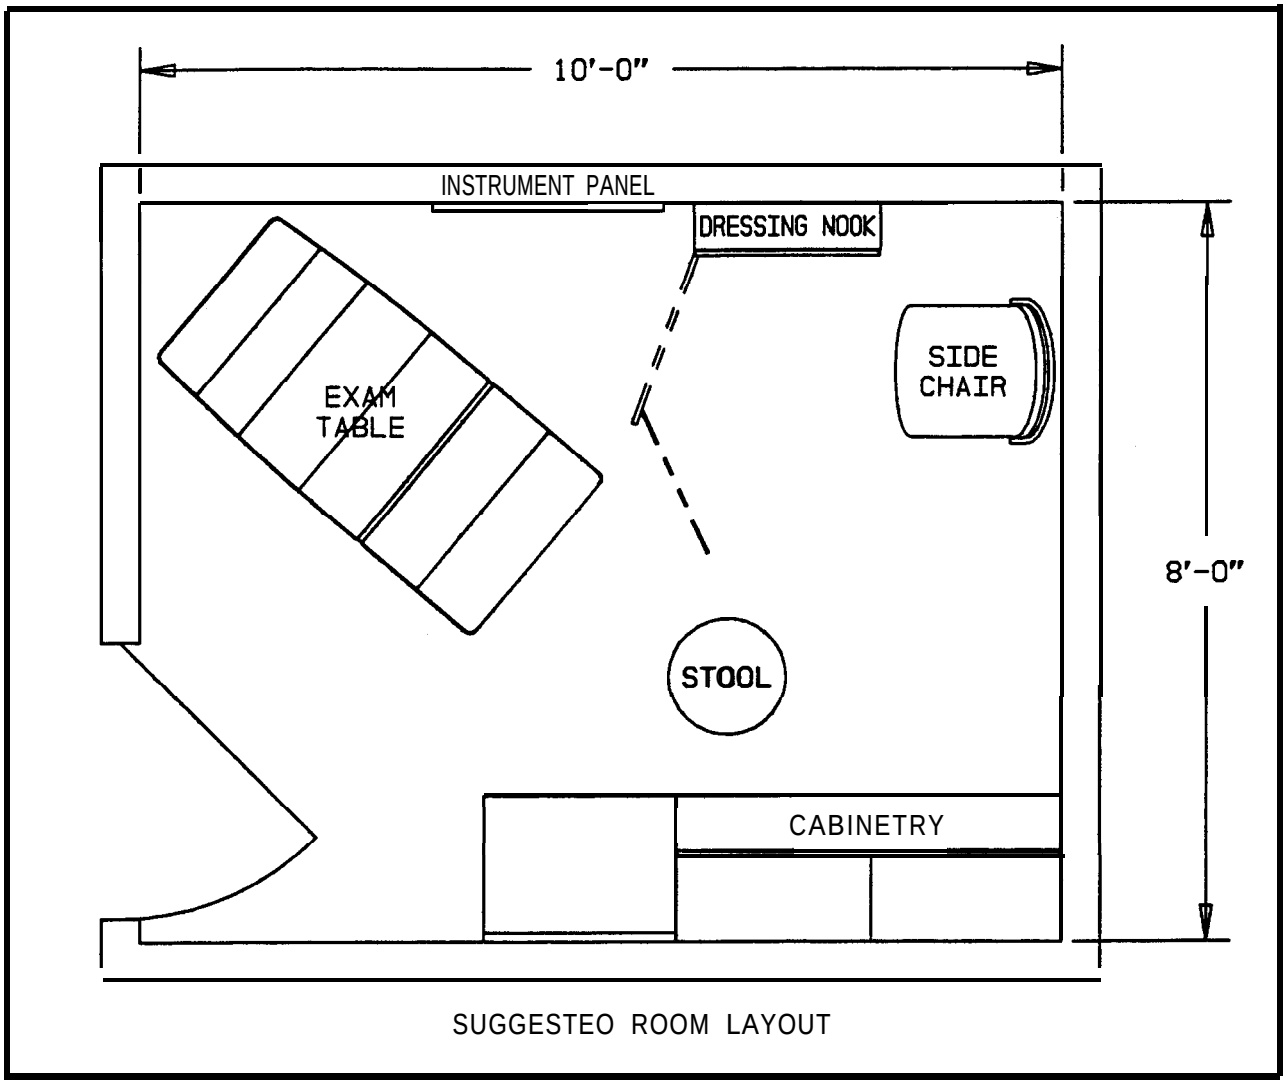

FIG. C

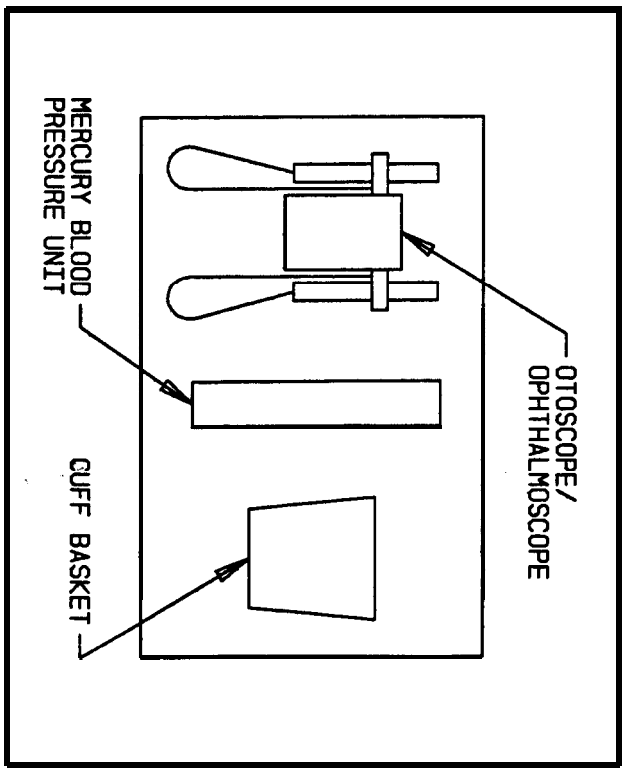

FIG. D

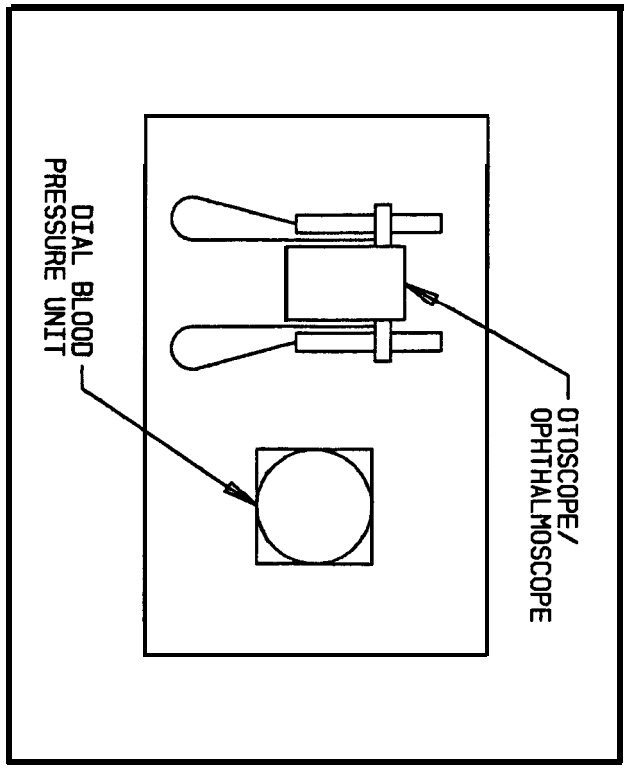

FIG. m